SLV3 PA: Quick starting up of a cycle (D0459B)

AVAILABLE CYCLES (Complete list in the user manual)

Cycle 1
Simple cleaning

- Leak test
- Pre-cleaning.
- Cleaning
- Rinsing
- Disinfect 5min
- Rinsing
- Drying***

TIME : 20* min.

Cycle 2
Double cleaning

- Leak test
- Pre cleaning.
- Cleaning
- Rinsing
- Cleaning
- Rinsing
- Disinfect. 5min.
- Rinsing
- Drying***

TIME : 22* min.

Cycle 4
« Disinfection only »

- Leak test
- Pre-cleaning
- Disinfect. 5min.
- Rinsing
- Drying***

TIME : 15* min.

Cycle 6
« Self-disinfection »
must be launched at the end of the day and at the beginning of the day if the machine has not been used for 72 hours.

- Diconnection tank disinfection
- Prefiltering unit + 0.2µm water filter disinfection
- Machine Disinfection

Stand-by +
Over hour cycling
To reuse the machine press F3

- Internal modules drying

TIME : 50 + 7* min.

THE INSTRUCTIONS ON THIS PAGE DO NOT EXEMPT THE USER FROM READING THE USER MANUAL

LAUNCHING A CYCLE

As soon as the endoscopy is finished, the endoscope must always be pretreated before being loaded into the Soluscope. A minimum pretreatment protocole is presented in the user manual

After referring to the endoscope No., select the correct connectics set and connect it. See doc « Connectics choice »

→ For cycle 6 : Connect

From ground menu (Press "MAIN" or “F1” to display it) .

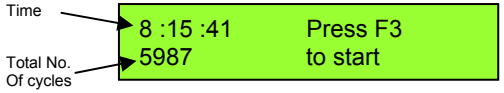

Press « F3 » and carefully read the intruction on the display.

"Bar-codes reader ……" ⇒ Input only with the bar-codes reader, if the display is different ⇒ Manual input. Once the input is complete, the following message is displayed

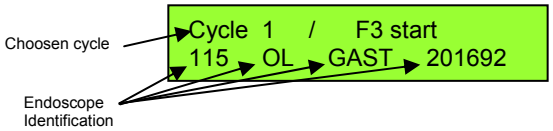

Close the lid without forcing and press F3 to Start.

Main **TO RE-INPUT THE DATA**

F1 **TO INTERRUPT THE CYCLE**

* cycles times may vary according to the type of endoscope and the filters clogging (+/- 2min.)
*** The drying is enough for an immediate reuse of the endoscope. For a long time storage, have the endoscope manually dried with medical air.